






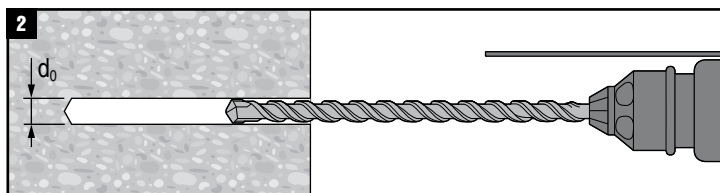






















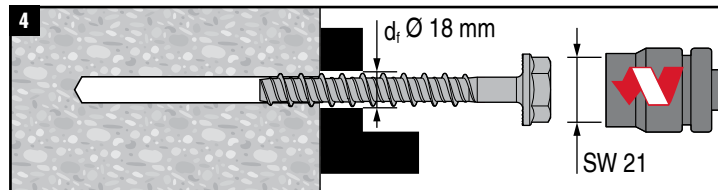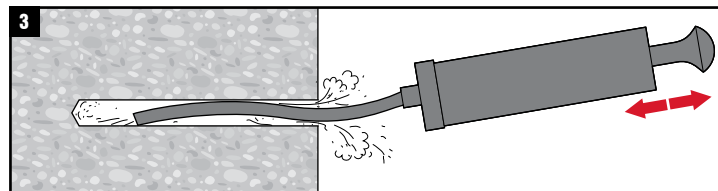








1.1	HUS-H HUS-HF	$h_{nom}$	$h_1$	$t_{fix}$
	14 x 80	70 mm	$100 \text{ mm} - t_{fix}$	0 ... 10 mm



2.1			
			
$d_0$			
	$\pm T$		
	$\varnothing 14 \text{ mm}$		



4.1				
	SIW 14-A			
	SIW 22-A			
	SIW 22T-A			
	SI 100			
	65 Nm	