

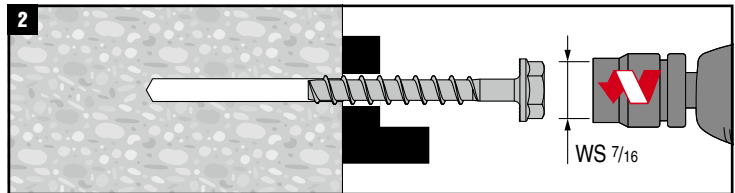


KWIK HUS-EZ SS316	h_1^*	t_{fix}
$1/4 \times 2$	$2\ 3/8 - t_{fix}$	0... $3/8$
$1/4 \times 2\ 1/2$	$2\ 7/8 - t_{fix}$	0... $7/8$
$1/4 \times 3$	$3\ 3/8 - t_{fix}$	0... $1/2$

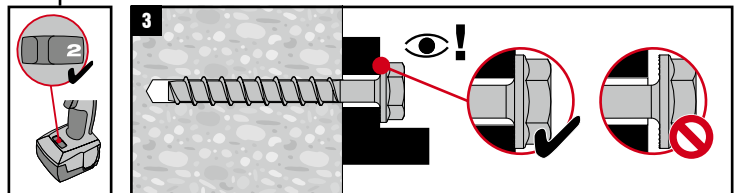

2.1		
SID 4-A22	✓	✓
SIW 6AT-A22	✓	✓

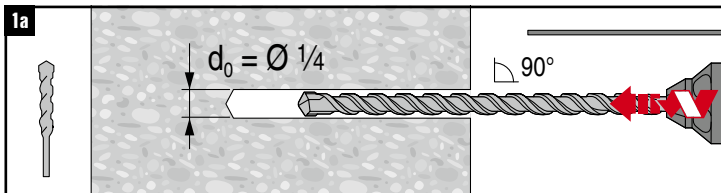

*For non-hole cleaning installation (steps 1a), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.